
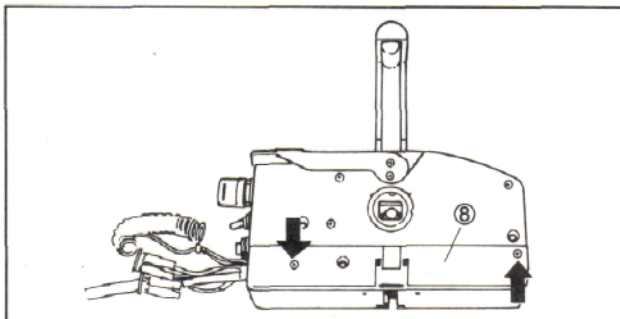
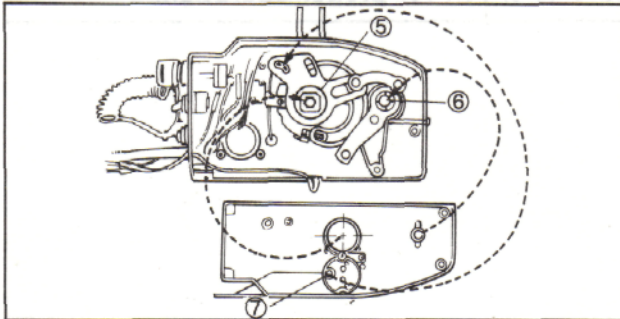
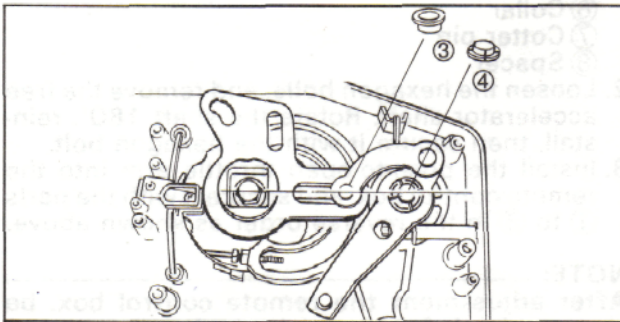
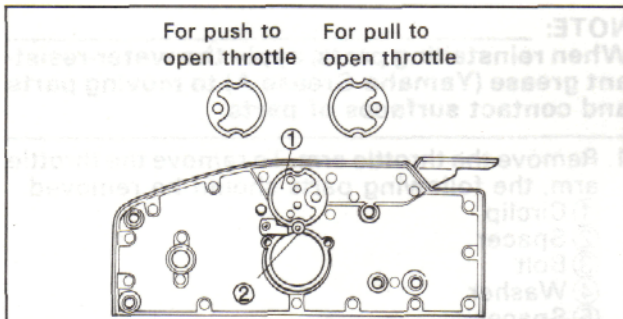
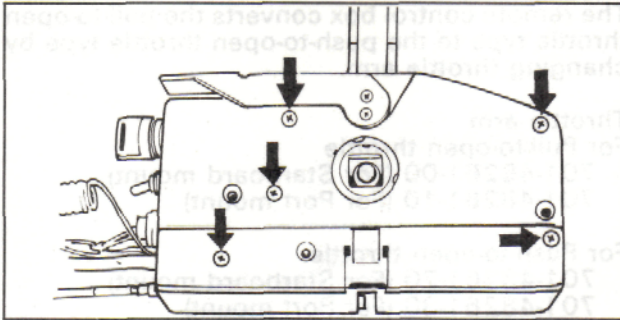


ADJUSTMENT (FOR 703)

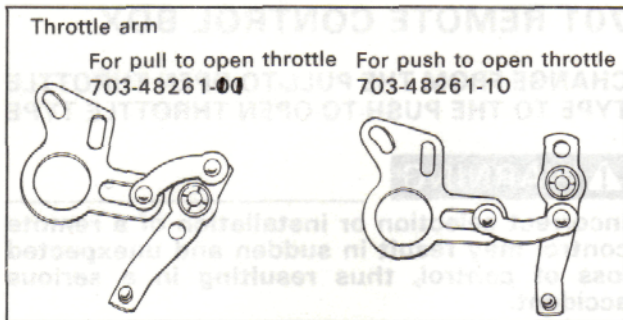

703 REMOTE CONTROL BOX

CHANGE FROM THE PUSH-TO-OPEN THROTTLE TYPE TO THE PULL-TO-OPEN THROTTLE TYPE

⚠ WARNING

Incorrect selection or installation of a remote control may result in sudden and unexpected loss of control, thus resulting in a serious accident.

The remote control box converts the push-to-open throttle type to the pull-to-open type by changing throttle arm and throttle drum positions.

NOTE:

When reinstalling parts, apply the water-resistant grease (Yamaha Grease A) to moving parts and contact surfaces of parts.

1. Pinch the wire cover and pull it out to remove.
2. Loosen the screws and remove both upper and lower back panels.
3. Loosen the two screws holding the neutral throttle lever and remove the throttle drum. Rotate the drum 180°, and retighten the neutral throttle lever.

CAUTION:

Use care so that the roller does not jump out due to spring force.

TIGHTENING TORQUE:

0.15~0.18 m·kg (1.1~1.3 ft·lb)

- ① Throttle drum
- ② Roller

4. Remove the throttle arm for the push-to-open throttle type, and install the throttle arm for the pull-to-open throttle type.

CAUTION:

Replace the cam roller and bushing attached to the push-to-open throttle with the bushing and cam roller of the pull-to-open throttle.

- ③ Cam roller
- ④ Bushing

5. Align the main shaft and throttle arm with the grooves, and align the drive pin with the slot. Then secure the upper back panel with the three screws.

TIGHTENING TORQUE:

0.15~0.18 m·kg (1.1~1.3 ft·lb)

- ⑤ Main shaft
- ⑥ Throttle arm shaft
- ⑦ Drive pin

6. Secure the lower back panel with the two screws, and install the wire cover.

- ⑧ Back panel

NOTE:

After adjust the remote control box, be sure to check for proper operation.